

 
988329 RADIO ANTENNA INSTRUCTION SHEET


R-10 SERIES

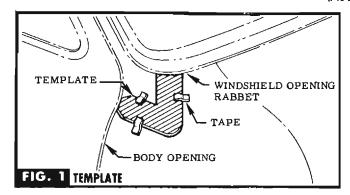

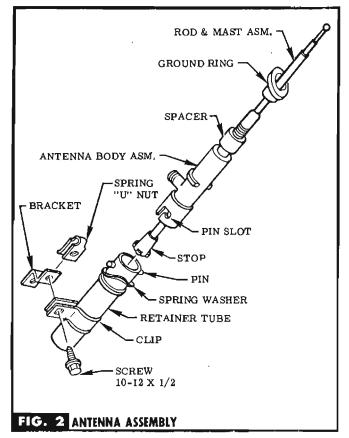



- STEP 2 REMOVE THE RIGHT HAND HEADLAMP ASM.
- **STEP 3** INSERT ROD & MAST INTO TOP OF ANTENNA BODY ASM, & PUSH THRU. SNAP STOP ON END OF ROD. SEE FIG. 2.
- **STEP 4** LOOSELY ATTACH BRACKET, CLIP, & SPRING NUT TO RETAINER TUBE WITH SCREW. SEE FIG. 2.
- **STEP 5** PLACE SPRING WASHER ON SHOULDER OF RETAINER TUBE, & ATTACH TO ANTENNA BODY ASM. BY INSERTING PINS ON TUBE INTO SLOTS ON ANTENNA BODY &

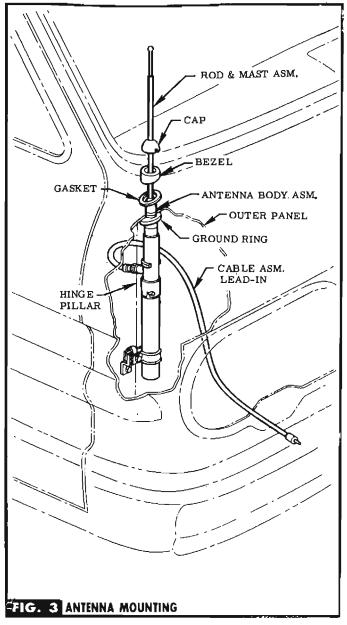

TURNING TO LOCK IN PLACE SECURELY. SEE FIG. 2.

- STEP 6 PLACE SPACER, & GROUND RING, ON ROD & MAST ASM, & DROP IT ONTO THE ANTENNA BODY. SEE FIG. 2.
- STEP 7 ATTACH CABLE ASM, TO ANTENNA BODY. INSERT ANTENNA ASM, THRU HEADLAMP OPENING & UP THRU HOLE IN OUTER PANEL. TURN ANTENNA ASM. SO THAT CABLE COUPLING IS TO R.H. SIDE OF CAR & NEARLY TOUCHES HINGE PILLAR. ROUTE CABLE ABOVE COUPLING & BEHIND ANTENNA. ALIGN GROUND RING TO BEAR UNIFORMLY ON PANEL INSIDE SURFACE. SEE FIG. 3.
- STEP 8 HOLDING THE ANTENNA ASM. IN PLACE, SLIP GASKET, BEZEL & CAP OVER ROD & MAST ASM. & ONTO THE OUTER PANEL. ALIGN GASKET & BEZEL TO BEAR UNIFORMLY ON THE OUTSIDE PANEL SURFACE & SECURE CAP WITH SPANNER WRENCH. SEE FIG. 3.