

988398 ROOF LUGGAGE CARRIER INSTRUCTION SHEET

R-10 SERIES

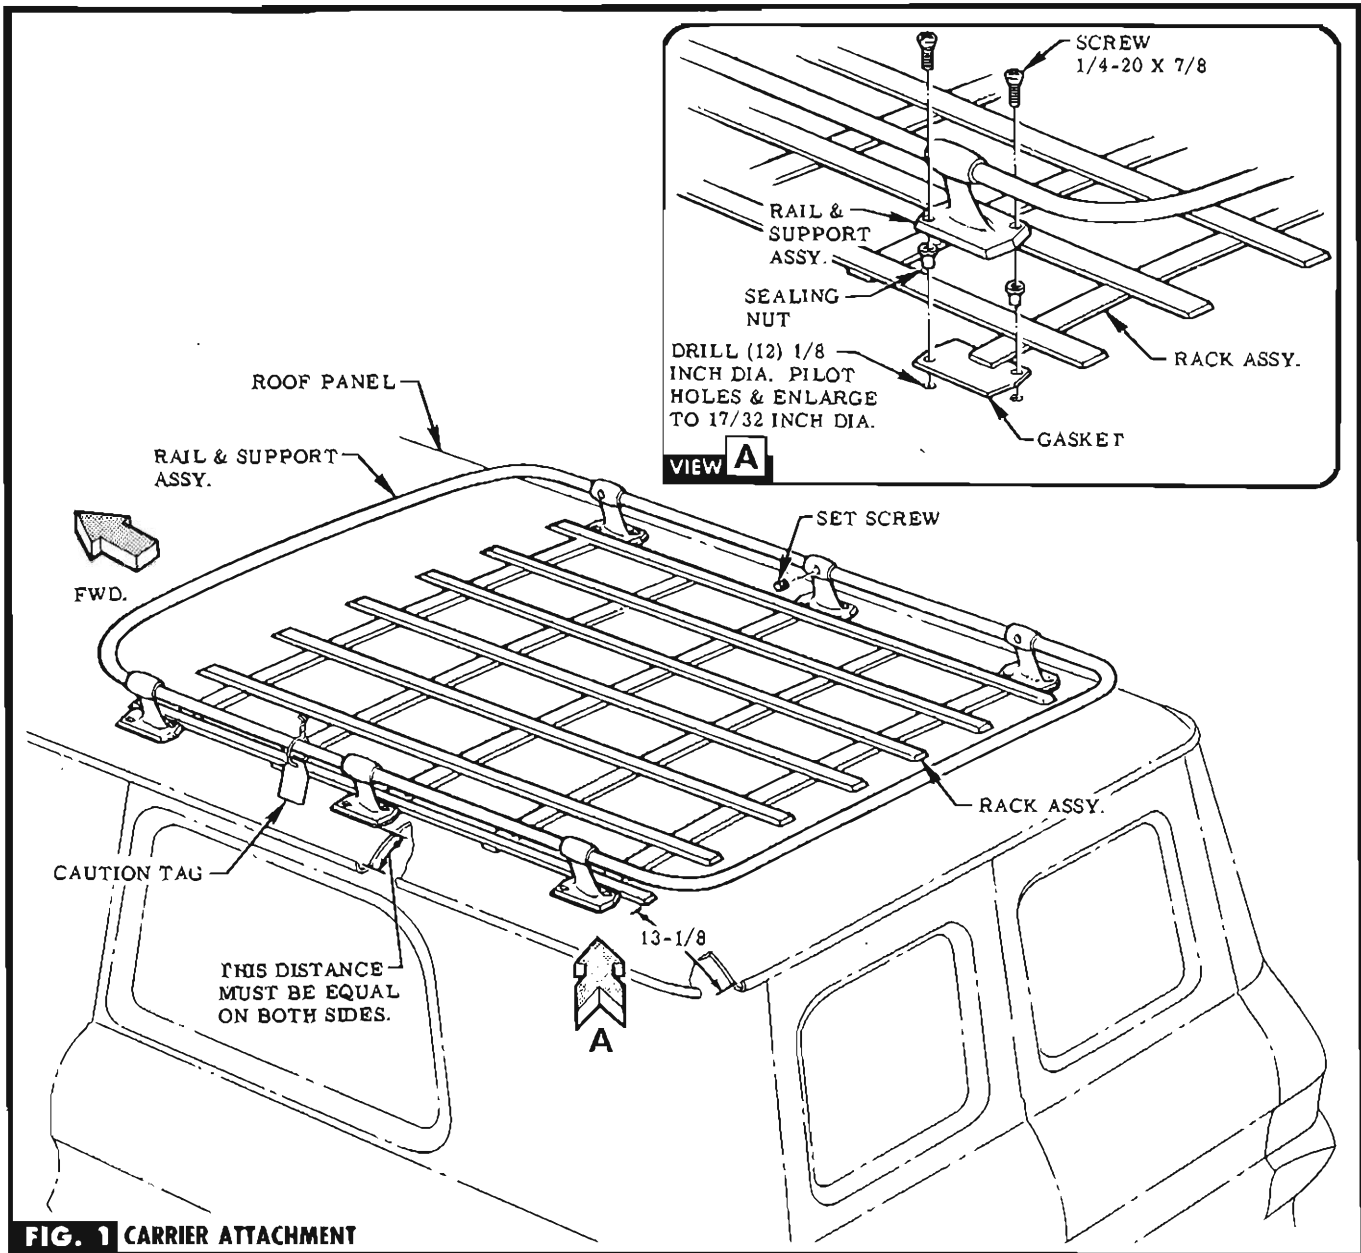


FIG. 1 CARRIER ATTACHMENT

STEP 1 APPLY MASKING TAPE TO ROOF PANEL IN ATTACHMENT AREAS TO AVOID MARRING FINISH.

STEP 2 TIGHTEN SET SCREWS ON RAIL & SUPPORT JUST ENOUGH TO PERMIT ROTATION ONLY.

STEP 3 PLACE RACK ON ROOF PANEL & ALIGN. SEE FIG. 1 & VIEW A.

STEP 4 PLACE RAIL & SUPPORT OVER ENDS OF RACK CROSS BARS & ADJUST SUPPORTS TO FIT ROOF SURFACE. SEE FIG. 1 & VIEW A.

STEP 5 RECHECK RACK POSITION, TO INSURE PROPER ALIGNMENT.

STEP 6 USING SUPPORTS AS TEMPLATES, MARK HOLE LOCATIONS.

REMOVAL. REMOVE RAIL & SUPPORT. SEE FIG. 1.

STEP 7 CENTER PUNCH, DRILL PILOT HOLE & ENLARGE. SEE VIEW A. **CAUTION** Care must be taken to prevent drill from penetrating roof more than 1/4 inch. Roof inner panel is immediately below.

STEP 8 PLACE GASKET ON ROOF PANEL & INSTALL SPECIAL SELF-SEALING NUTS. SEE VIEW A.

STEP 9 PLACE RACK OVER GASKETS, INSTALL RAIL & SUPPORT ON RACK & GASKET WITH SCREWS PROVIDED. TIGHTEN SET SCREWS IN SUPPORTS. SEE FIG. 1 & VIEW A.

NOTE Caution tag must be in place for customer information on the use of carrier. SEE FIG. 1.