
988466 HUB CAP INSTRUCTION SHEET

R - 10 & 1000 SERIES

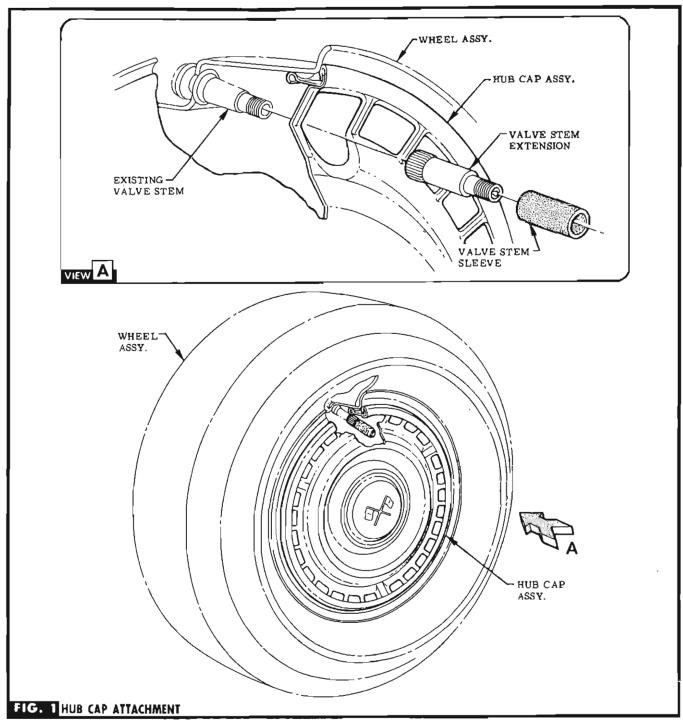

STEP 1 CUT VALVE STEM SLEEVE INTO FOUR EQUAL PARTS.

STEP 2 ATTACH VALVE STEM EXTENSION TO EXISTING VALVE STEM OF EACH WHEEL. SEE VIEW A.

STEP 3 INSTALL VALVE STEM SLEEVE ON VALVE EXTEN-

SION. SEE VIEW A.

STEP 4 PLACE HUB CAP AGAINST WHEEL SO THAT VALVE STEM EXTENSION PROTRUDES THRU OPENING, SEE FIG. 1 & VIEW A.

STEP 5 PRESS HUB CAP FIRMLY AGAINST WHEEL UNTIL IT SNAPS INTO PLACE. SEE FIG. 1 & VIEW A.