
985508-985509-985510-985511-985437-985498-985499 FRONT SEAT BELT INSTRUCTION SHEET

CHEVROLET, CHEVY, CORVAIR, CORVAIR 95 (GREENBRIER) & TRUCK (SUBURBAN)
NOTE: FOR OPERATING INSTRUCTIONS FOR OWNER, PLACE LAST SHEET IN GLOVE COMPARTMENT

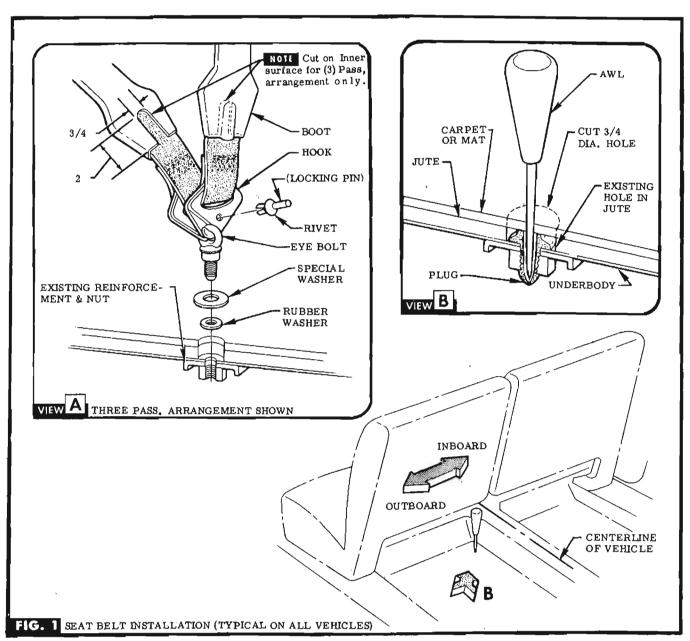

STEP 1 USING DIMENSIONS GIVEN, LOCATE PLUG BY FEELING CARPET OR RUBBER MAT (SLIGHT INDENTATION). PROBE WITH AWL TO LOCATE HOLE IN PLUG. INSERT AWL DOWN INTO PLUG & LEAVE STANDING IN UPRIGHT POSITION, CUT CARPET OR MAT. SEE FIG. 1 & VIEW B.

FIG. 2 - CHEVROLET

FIG. 3 ~ CHEVY


FIG. 4 - CORVAIR


FIG. 5 - CORVAIR 95 (GREENBRIER)

FIG. 6 - TRUCK (SUBURBAN)

\$169 2 REMOVE PLUG & INSTALL EYE-BOLT. SEE FIG. 1 & VIEW A. NOTE Install special washer on eye-bolt then force rubber washer over threaded portion & seat tight against shoulde of eye-bolt. Special washer used only on vehicles with carpets. See Fig. 1 (View "A").


STEP 3 WHEN INSTALLING TWO BELTS ON ONE EYE-BOLT, BOOTS MUST BE CUT. SEE FIG. 1 (VIEW "A".)

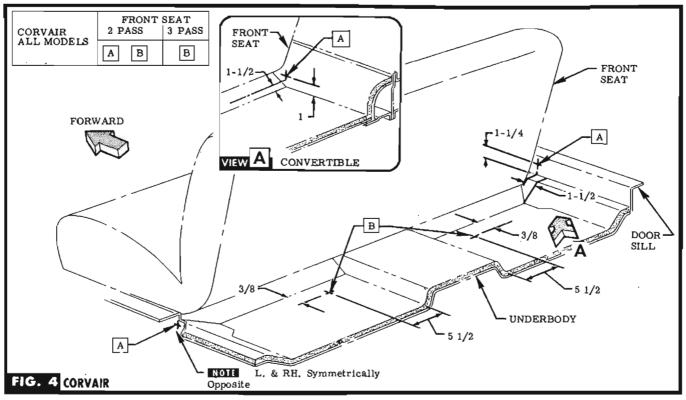


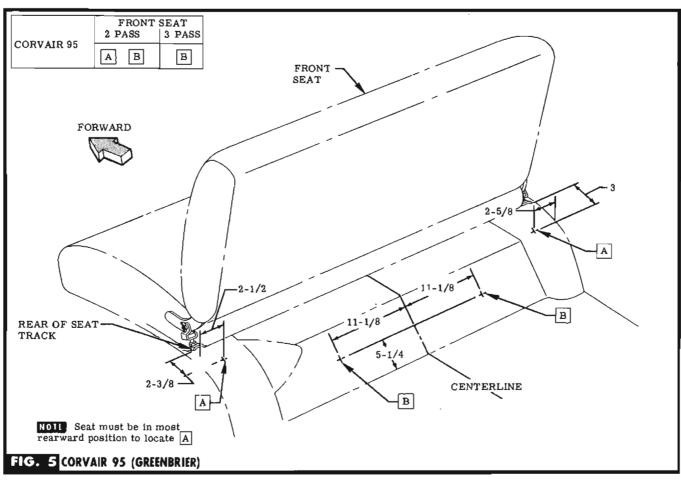


 $\theta ;$

DEALER: PLACE THIS SHEET IN GLOVE COMPARTMENT

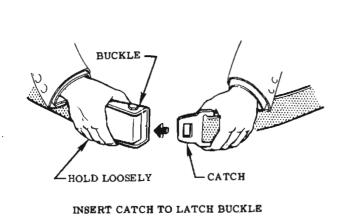


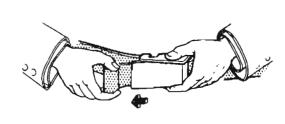

PULL TO TIGHTEN BELT

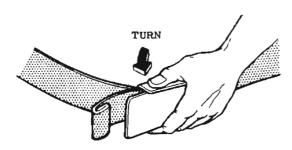



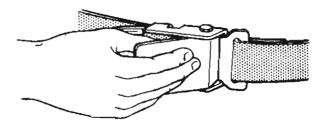


TO UNLATCH PULL LEVER OUTWARD

MOII Adjust belt length to suit individual requirement. With belt correctly adjusted, person should not feel the weight of the Buckle asm. on the abdomen. At no time should the belt allow more than 1 inch forward movement of the body.

Note When not in use belts should be carefully laid on seat & kept off the floor.

CLEAN BELTS WITH CLEANER OR DETERGENT RECOMMENDED FOR NYLON.

(AUTION Do not bleach or redye belts as this may cause severe loss of strength.

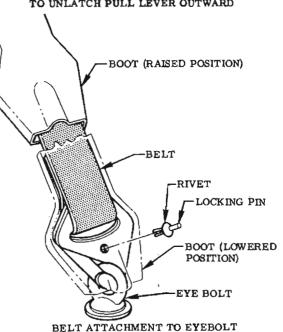


(WITH RIVET IN REMOVED POSITION)

FIG. 10 OPERATION PROCEDURE & BELT ADJUSTMENT

985618-985619-985620-985621-985622-985623-985541 REAR SEAT BELT INSTRUCTION SHEET

REAR SEAT OF CHEVROLET, CHEVY, CORVAIR, CORVAIR 95 & TRUCK (FRONT & REAR)

NOTE: FOR OPERATING INSTRUCTIONS FOR OWNER, PLACE LAST SHEET IN GLOVE COMPARTMENT

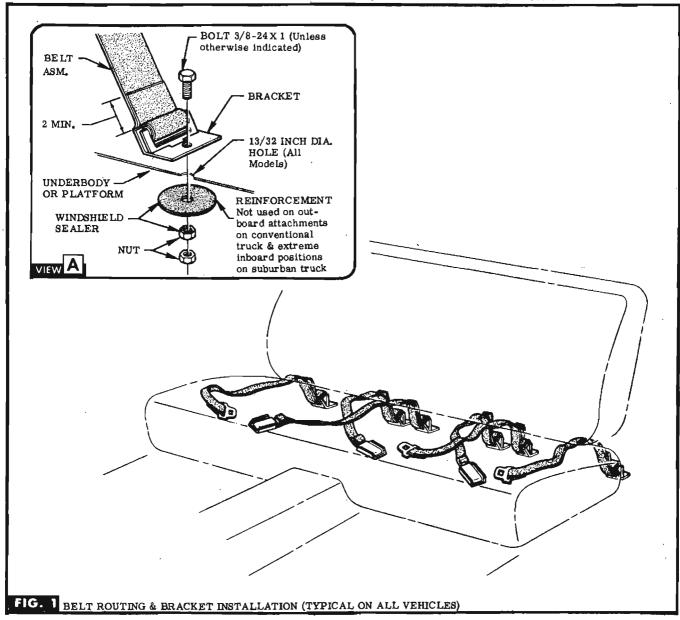

\$1EP 1 REMOVE SEAT CUSHION & BACK OR FOLD SEAT FOR ACCESSIBILITY, ALSO TURN BACK FLOOR MAT AT AREA OF INSTALLATION, IF EXISTING. PIERCE & SLIT AREA OF MAT AT BRACKET LOCATIONS.

STEP 2 LOCATE DIMPLES IN FLOOR PANEL (EXCEPT SUBURBAN TRUCK USE DIMENSIONS ONLY). CENTER PUNCH & DRILL HOLES THRU UNDERBODY OR PLATFORMS. SEE VIEW A &

FORMS. SEE VIEW A & FIG. 2 - CHEVROLET

FIG. 3 - CORVAIR

FIG. 4 - CORVAIR 95

FIG. 5 - PANEL TRUCKS (R. H. installation is symmetrically opposite)

FIG. 6 - SÜBURBAN TRUCKS (Adapter Kit 985580 must be procured to install Seat Belts.)

FIG. 7 - CONVENTIONAL TRUCK (Except Tilt Cabs).

FIG. 8 - TILT CABS


FIG. 9 - CHEVY (Except Station Wagon)

FIG. 10- CHEVY STATION WAGON


\$16P 3 INSTALL A BRACKET, BOLT, REINFORCEMENT & (2) NUTS AT EACH DRILLED HOLE EXCEPT WHERE SHOWN FOR SUBURBAN TRUCK. COAT REINFORCEMENT & NUTS WITH WINDSHIELD SEALER PRIOR TO INSTALLATION. SEE VIEW A & FIG. 6 VIEW G. NOTE Position Bracket for optimum belt angle.

STEP 4 ATTACH SEAT BELTS TO BRACKET & ADJUST TO PROPER LENGTH, SEE FIG. 1 VIEW A & FIG. 11.


STEP 5 REPLACE SEAT PREVIOUSLY REMOVED.

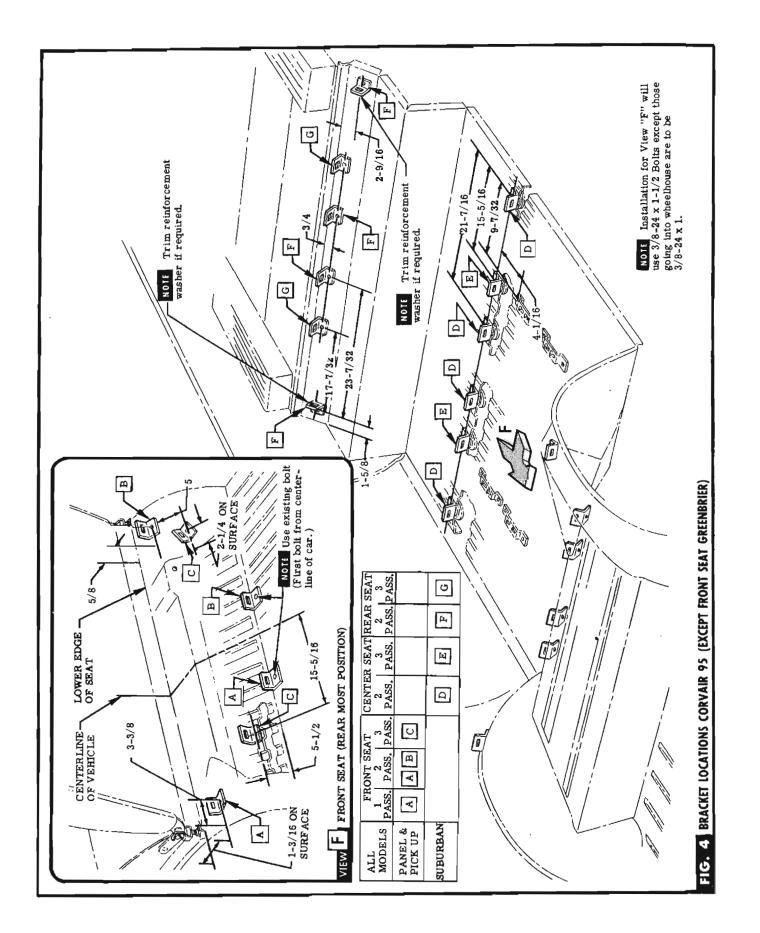


DEALER: PLACE THIS SHEET IN GLOVE COMPARTMENT

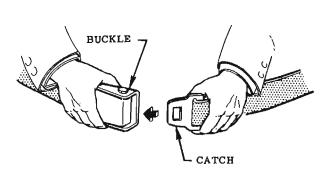


INSERT CATCH TO LATCH BUCKLE

 

PULL TO TIGHTEN BELT

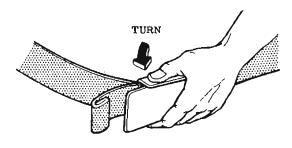

TO LOOSEN BELT TURN BUCKLE OUTWARD

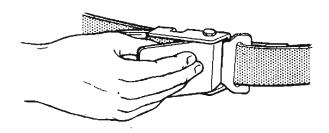

TO UNLATCH PULL LEVER OUTWARD

NOTE Adjust belt length to suit individual requirement. With belt correctly adjusted, person should not feel the weight of the Buckle asm. on the abdomen. At no time should the belt allow more than 1 inch forward movement of the body.

NOTE When not in use belts should be carefully laid on seat & kept off the floor.

CLEAN BELTS WITH CLEANER OR DETERGENT RECOMMENDED FOR NYLON.

CAUTION Do not bleach or redye belts as this may cause severe loss of strength.

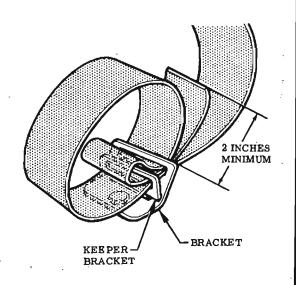


FIG. 11 OPERATION PROCEDURE & BELT ADJUSTMENT