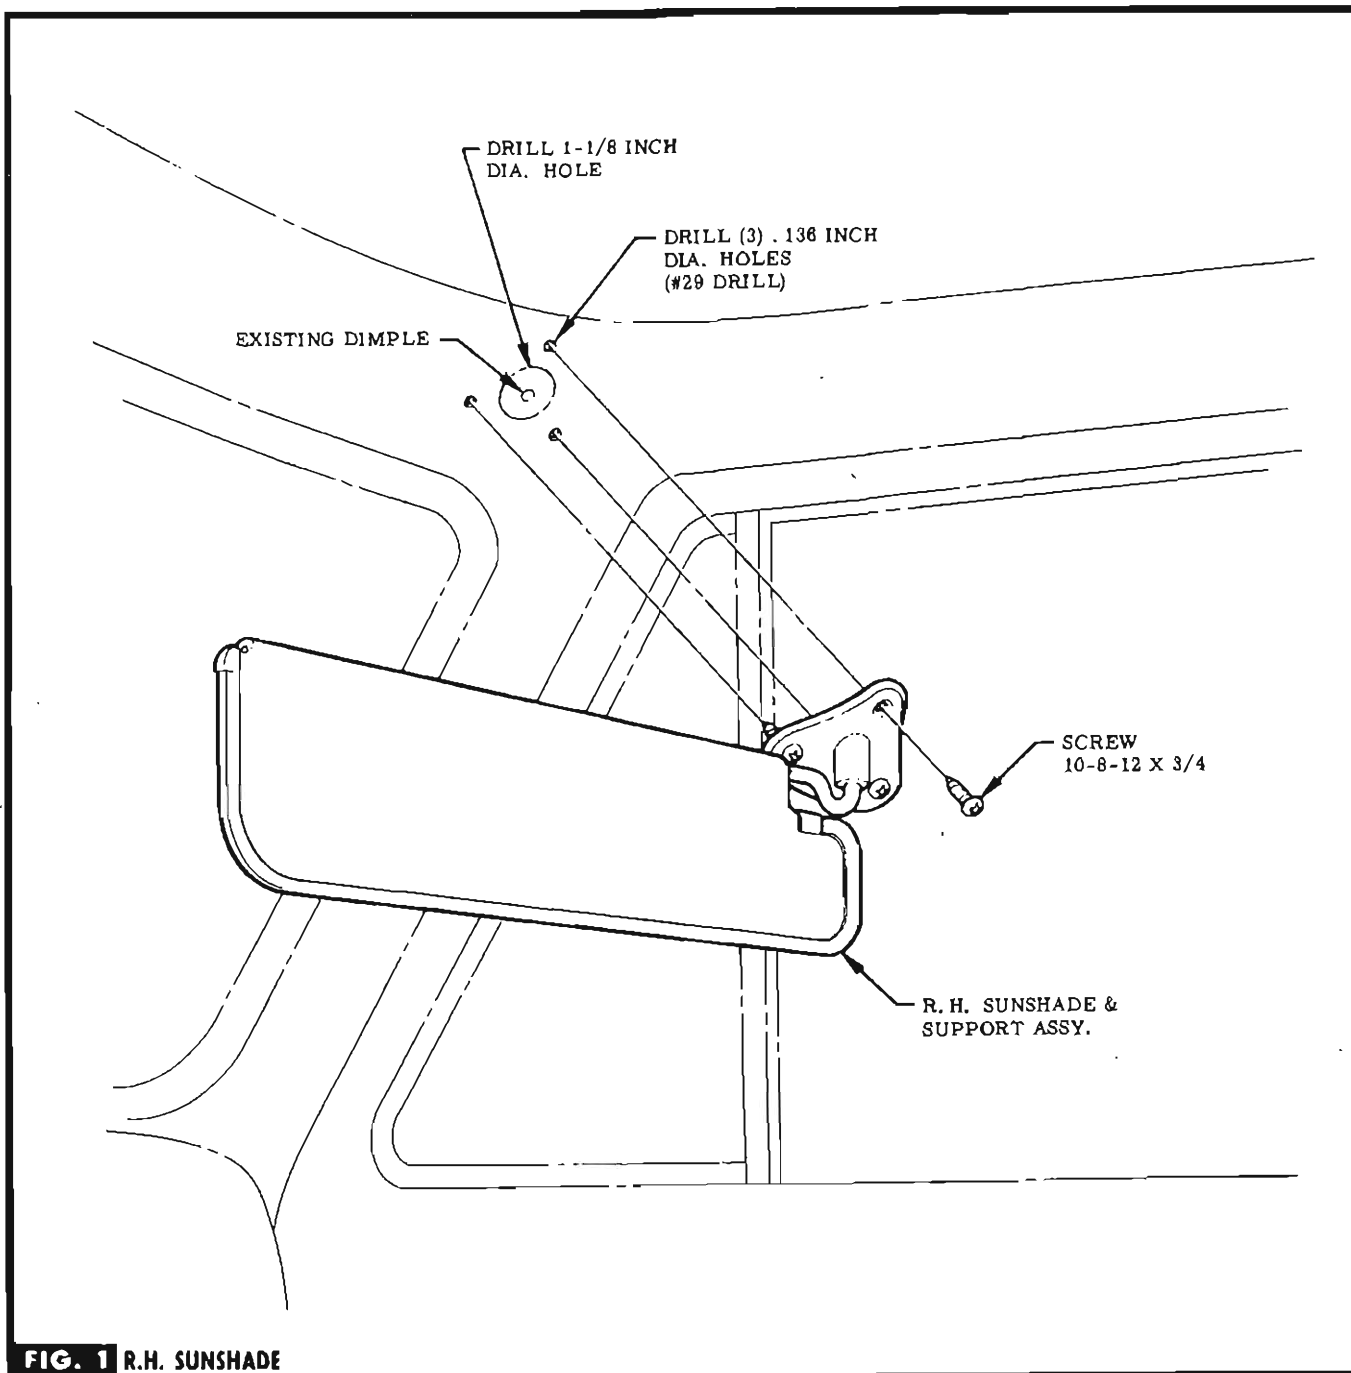


# 988352 SUNSHADE INSTRUCTION SHEET

R-10 SERIES



**FIG. 1 R.H. SUNSHADE**

**STEP 1** LOCATE EXISTING DIMPLE & DRILL LARGE HOLE IN TRIM PANEL. SEE FIG. 1.

**STEP 2** INSERT SUNSHADE & SUPPORT ASSY. INTO HOLE & LINE UP WITH TOP OF WINDSHIELD OPENING & L. H. SUN-

SHADE. SEE FIG. 1.

**STEP 3** USING SUPPORT AS TEMPLATE CENTERPUNCH & DRILL HOLES. SEE FIG. 1.

**STEP 4** INSTALL SUNSHADE WITH ATTACHING PARTS PROVIDED. SEE FIG. 1.