


988480-988481-988482-985025

### INSTALLATION INSTRUCTIONS FOR RAIN DEFLECTORS

1. Rain Deflectors will fit only the models shown on the carton label.
2. Rain Deflectors are stamped to show their position - RF for right front door; LF for left front, etc.
3. Insert flange between the weatherstrip and door frame. Flange should disappear and curves fit properly.
4. If weatherstrip bead overlaps the vent wing division post, clip off overlapping portion.
5. Centerpunch and drill the front screw hole first, using a #43 or .089 drill. Drill through door frame as shown below. (See sketch.) Insert screw.
6. Holding shade in position, centerpunch and drill remaining hole. Insert screw.
7. Operate window. If window binds spread glass channel to allow complete closing.

5 1/2

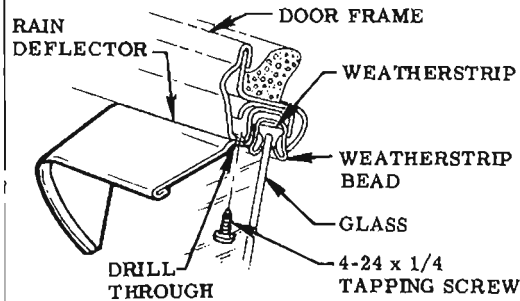

INSTRUCTION NO.

3755722

2-11-58

© 1958 Chevrolet Division  
General Motors Corp.

3 1/8