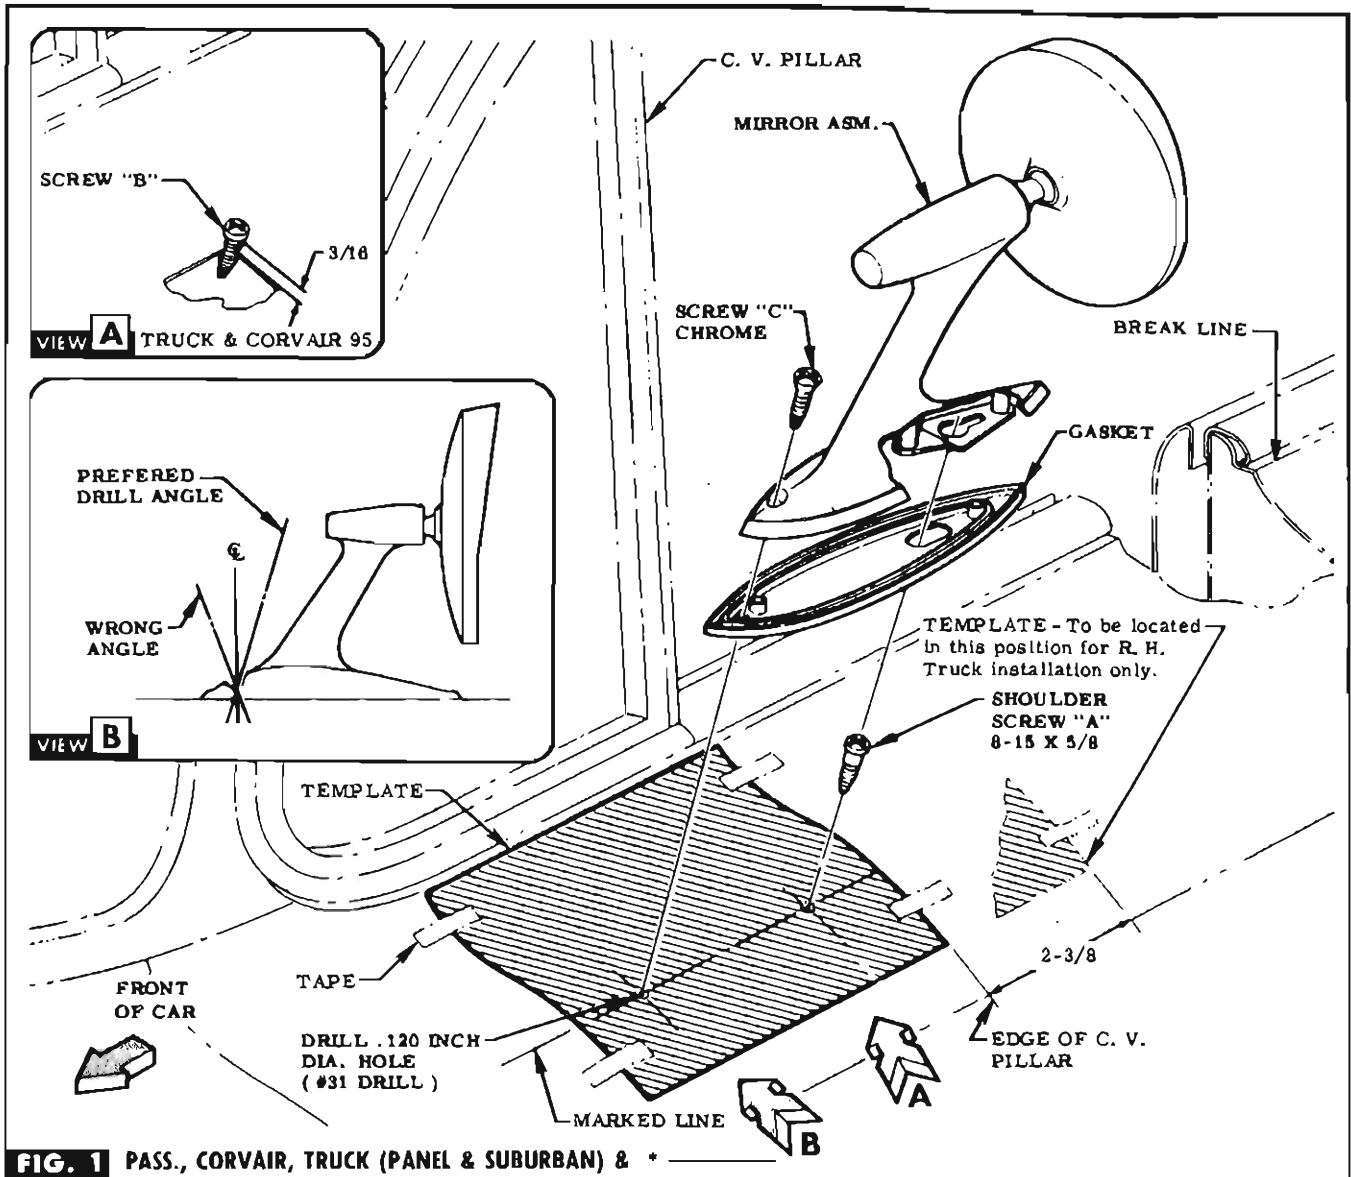


## OUTSIDE REAR VIEW MIRROR INSTRUCTION SHEET

CHEVROLET, CORVAIR, CORVAIR 95, TRUCK (PANEL & SUBURBAN) & \*



**FIG. 1** PASS., CORVAIR, TRUCK (PANEL & SUBURBAN) & \*

**STEP 1** FOLLOW DIRECTIONS ON TEMPLATE FOR MODEL DESIGNATION & LOCATION. TAPE TEMPLATE IN PLACE. SEE FIG. 1 OR FIG. 2.

**STEP 2** LIGHTLY CENTER PUNCH AT REAR HOLE LOCATION, & MARK CENTERLINE WITH CHALK OR GREASE PENCIL ON DOOR SURFACE FORWARD OF TEMPLATE. SEE FIG. 1 OR FIG. 2.

**STEP 3** DRILL REAR HOLE AS DESIGNATED ON TEMPLATE, REMOVE TEMPLATE.

**STEP 4** INSERT SCREW PROVIDED INTO REAR HOLE, SCREW "A" FOR CHEVROLET, CORVAIR & \* SCREW "B" FOR TRUCKS & CORVAIR 95. **NOTE** Use dimension in View "A" for Trucks & CorvaIr 95. Adjust screw "B" so mirror will be tight.

**STEP 5** PLACE GASKET ON MIRROR BASE & PLACE MIRROR OVER SCREW "A" OR "B", SLIDE MIRROR FORWARD TO LOCK IN PLACE. SEE FIG. 1 OR FIG. 2.

**STEP 6** LINE UP FORWARD TIP OF MIRROR BASE WITH LINE PREVIOUSLY MARKED ON DOOR. SEE FIG. 1 OR FIG. 2.

**STEP 7** DRILL FRONT HOLE THRU EXISTING HOLE IN MIRROR BASE AT ANGLE AS SHOWN IN VIEW B. INSERT SCREW "C" PROVIDED, TIGHTEN SECURELY. SEE FIG. 1 OR FIG. 2.

**NOTE** Care should be taken not to mar chrome.

**NOTE** L. H. installation shown, R. H. installation same except to place template face down on Chevrolet, CorvaIr, Truck & \* For R. H. Truck installation also use dimension shown in Fig. 1. For R. H. installation on CorvaIr 95 use dimensions in Fig. 3.

