

VISOR R.H. SUN
985900
CORVAIR SERIES 95

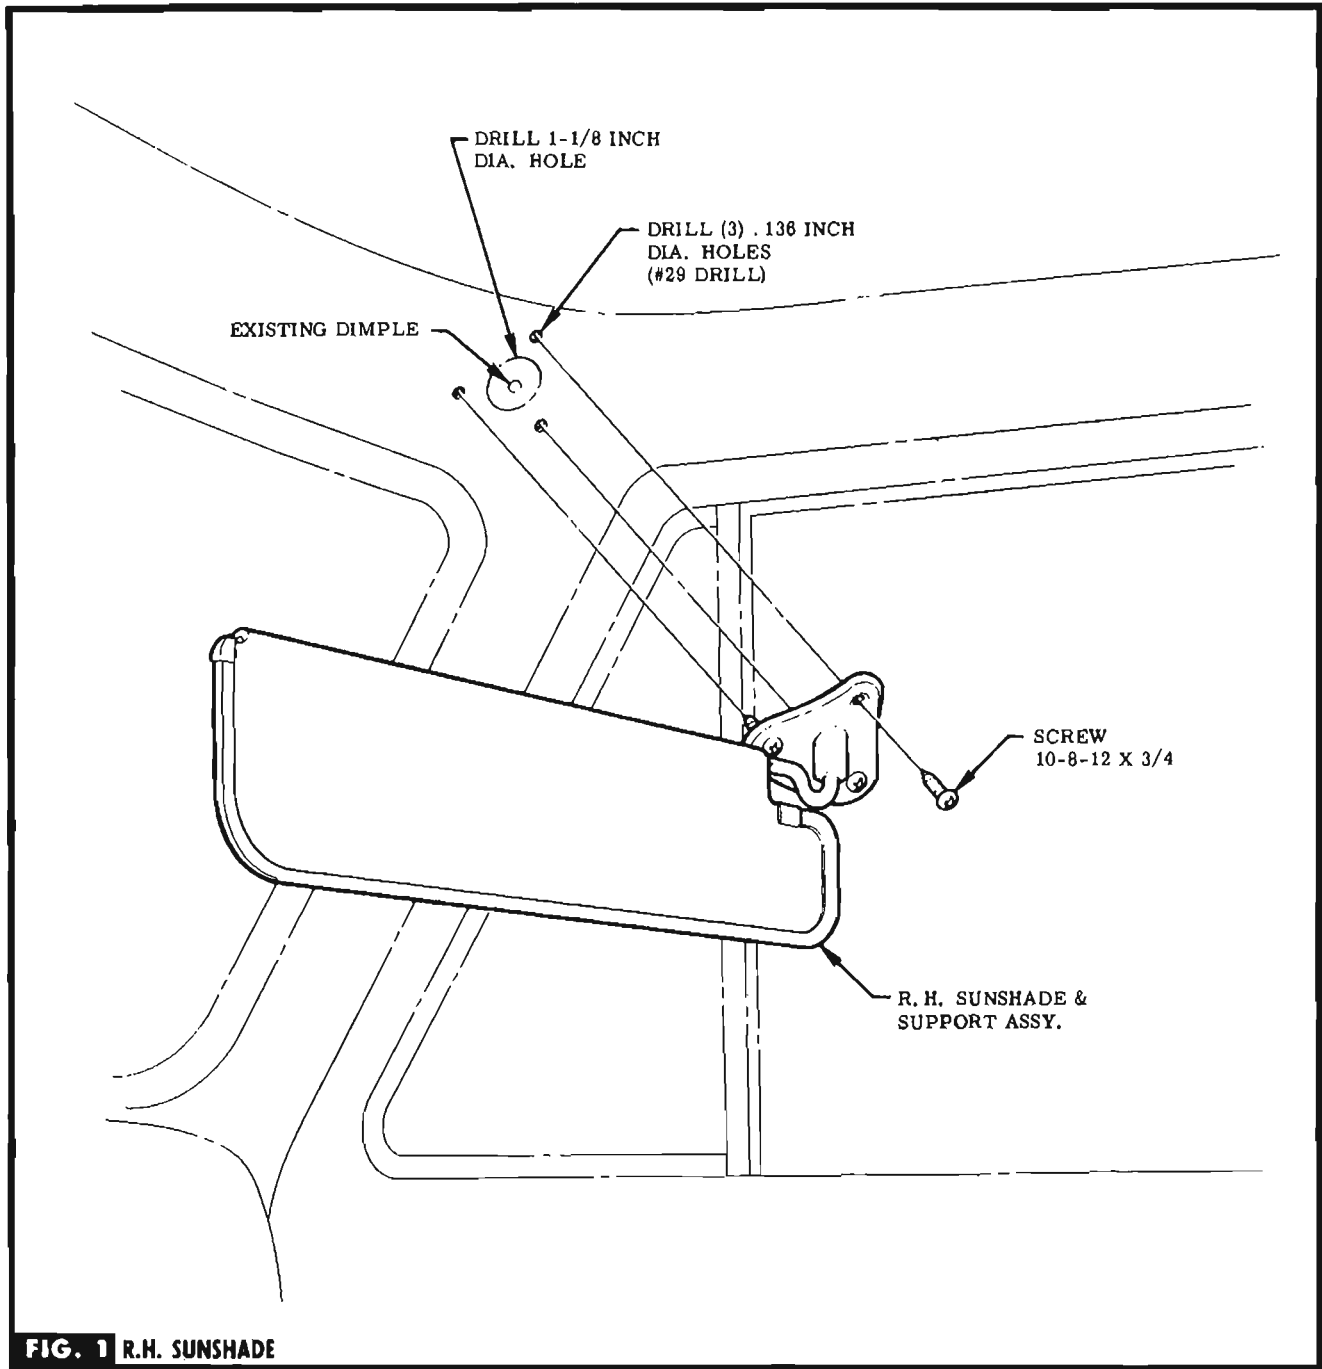


FIG. 1 R.H. SUNSHADE

STEP 1 LOCATE EXISTING DIMPLE & DRILL LARGE HOLE IN TRIM PANEL, SEE FIG. 1.

STEP 2 INSERT SUNSHADE & SUPPORT INTO HOLE & LINE UP WITH TOP OF WINDSHIELD OPENING & L. H. SUNSHADE, SEE FIG. 1. **CAUTION** Be sure bracket is located sym-

metrically opposite to L. H. bracket before drilling holes.

STEP 3 USING SUPPORT AS TEMPLATE CENTERPUNCH & DRILL HOLES, SEE FIG. 1.

STEP 4 INSTALL SUNSHADE WITH ATTACHING PARTS PROVIDED, SEE FIG. 1.