
LIGHTER—CIGARETTE 985975

CORVAIR SERIES 95 TRUCK

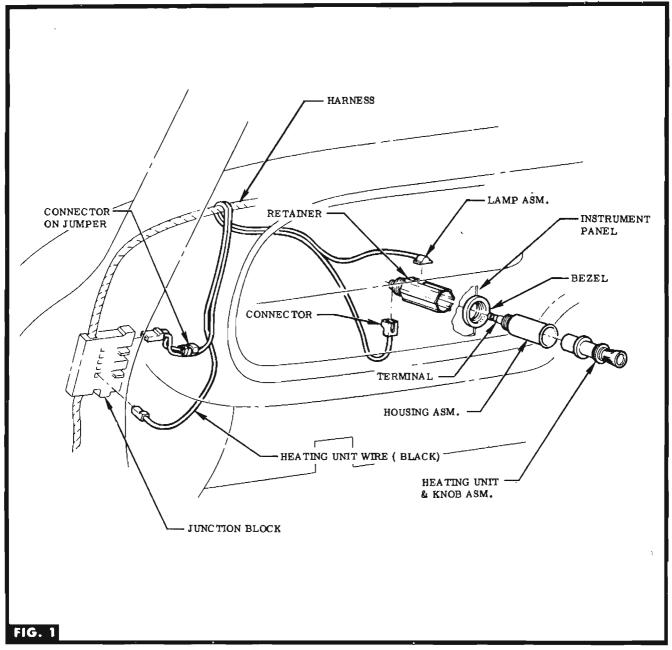

- STEP 1 REMOVE PLUG FROM HOLE IN INSTRUMENT PANEL.
- STEP 2 INSERT HOUSING THRU BEZEL & HOLE IN INSTRU-MENT PANEL & SECURE WITH RETAINER. PLUG HEATING UNIT INTO HOUSING. SEE FIG. 1.
- **STEP 3** ATTACH CONNECTOR TO TERMINAL ON HOUSING & INSERT LAMP INTO RETAINER. SEE FIG. 1.
- STEP 4 LOOP WIRES AROUND HARNESS & ROUTE TO JUNCTION BLOCK. SEE FIG. 1.
- \$1EP 5 PLUG BLACK WIRE CONNECTOR INTO OPENING IN JUNCTION BLOCK MARKED "CIG. LTR.". & CONNECTOR WITH JUMPER INTO OPENING MARKED "PANEL LPS." NOIL If receptacle is occupied, remove existing wire & connect to jumper wire.